

Uniden®

UH5030 **Mini Compact** **UHF CB Transceiver**

For more exciting new products please visit our website:
Australia: www.uniden.com.au

OWNER'S MANUAL

Contents

Introduction	3
Controls & Connectors	4
Indicators	6
Included with your UH5030 Transceiver	7
Connecting the Microphone	8
Mounting the MIC Hanger	9
Operation	10
Turning on the Power	10
Setting the Volume	10
Selecting a Channel	11
Transmitting	11
Setting the Squelch Level	12
Monitor	12
Programming the Instant Priority Channel-1	13
Programming the Instant Priority Channel-2	13
Recalling the Instant Channel	13
Call Function	13
Using Repeater Channels	14
Operating the UHF CB Radio in Duplex Mode	15
Scanning	16
Open Scan (OS) Mode	16
Group Scan (GS) Mode & Priority Watch	16
Add/Remove Channels from SCAN Memory	17
CTCSS & DCS	18
Voice Enhancer (EQL) Setting	19
Scramble	20
USB Power	20
Busy Channel Lockout	21
Call tone	21
Roger Beep	22
Key Beep On/Off	22
MIC Gain Control	23
Backlight Colours	23
Backlight Brightness	24
LCD Flip	24
CTCSS Codes Table	25
DCS Codes Table	26
UHF CB Channel Guidelines	27
UHF CB Channels & Frequencies	28
Warranty	30

Introduction

The Uniden UH5030 is designed to provide you with years of trouble free service. Its rugged components and materials are capable of withstanding harsh environments. Please read this Operating Manual carefully to ensure you gain the optimum performance of the unit.



NOTE

The citizen band radio service is licenced in Australia by ACMA Radio-communications (Citizen Band Radio Stations) Class Licence and in New Zealand by MBIE General User Licence for Citizen Band Radio and operation is subject to conditions contained in those licenses.

Features

- UHF-CB Narrow Band (NB) Transceiver Radio¹
- 80 Channels
- 5W Transmission Power
- Built-in AVS Circuitry²
- Duplex Capability¹
- 5V USB Charging Port (max 2.1A)
- Roger Beep Function On/Off
- 5 Different Call Tones

Special Features

- Voice Enhancer (EQL)
- LCD Display with 7 Backlight Colors
- LCD Brightness
- +12V to +24V DC Power Input
- Under and Over Voltage Alert Function
- Signal Strength/Power Meter
- Volume Control (“oF”, “1” ~ “40”)
- External Speaker Jack
- Power On/Off Control Switch
- Voice Scramble
- Front MIC Jack
- MIC Gain Control
- 9 Levels and Off Preset Squelch


Channel Features

- Rotary Volume Select Knob
- Instant Channel Programming
- One touch Instant Channel Recalling
- Voice Scramble
- Group Scan and Priority Channel Watch
- Open Scan
- Scan Channel Memory On/Off separately divided into OS and GS
- Busy Channel Lock-out Function
- 38 Built-in CTCSS (Continuous Tone Coded Squelch System) codes
- 104 additional DCS (Digital Coded Squelch) codes that are user selectable

¹ Refer to p.27 - p. 29 for channel information



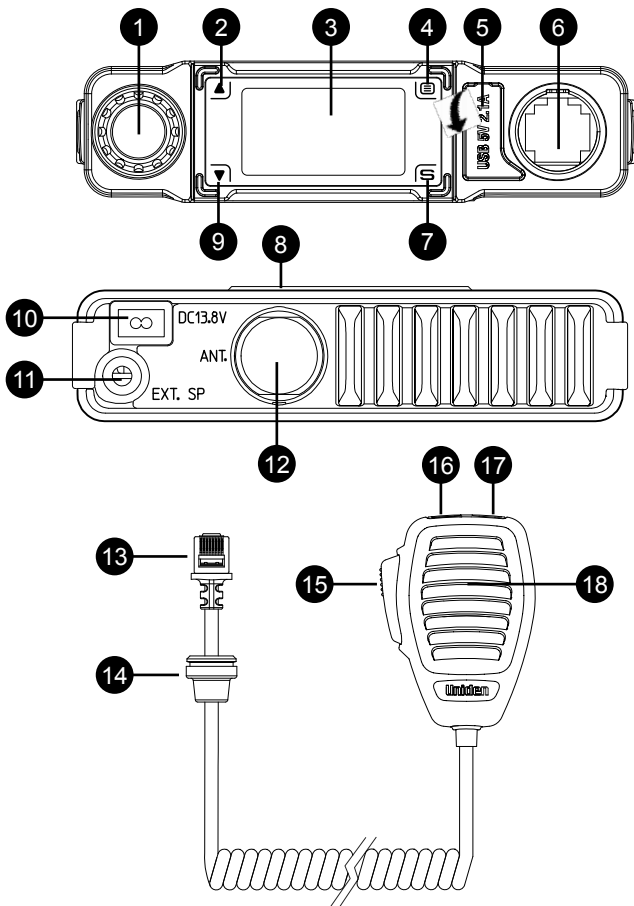

² AVS - Automatic Volume Stabilizer detects and manages incoming audio to comparable levels.

Controls & Connectors









Controls & Connectors

- 1 PUSH control - Squelch Select (press)
/Power On/Off (press & hold)

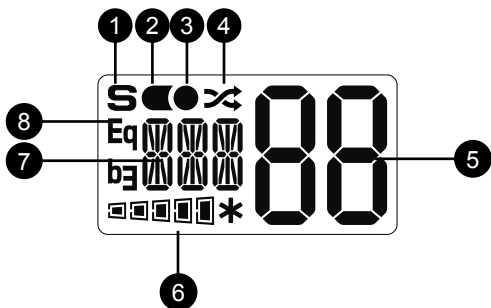
ROTARY control - Volume/
Menu Item Selector
- 2  - Channel Up Control
- Select Up Control
- 3 Liquid Crystal Display (LCD)
- 4  - Menu Button (press)
/Monitor function (press & hold)
- 5 5V USB Charging Port (max 2.1A)
- 6 MIC - Front Microphone Jack
- 7  - Scan button (press)
/Scan Memory (press & hold)
- 8 Speaker
- 9  - Channel Down Control
- Select Down Control
- 10 Power Input Connection (13.8VDC or 27.6VDC)
- 11 **EXT SP** - External Speaker Jack
- 12 UHF Antenna Connection
- 13 RJ45 type plug
- 14 Front MIC Jack Cover
- 15 **PTT** - Push To Talk Button
- 16 **CALL** - Call Tone Button
- 17 **INST** - Instant Channel Button
- 18 **MICROPHONE**

Indicators




- 1 **S** - Scan mode
- 2  - Instant Channel
- 3  - Channel in Memory
- 4  - Scramble
- 5 **00** - Channel Number / Menu Item Settings
- 6  - Receive Signal Level (Channel Busy Indicator)
 - Transmit Signal Power Level
- 7 **000** - CTCSS/DCS Code number / Menu Item
- 8 **Eq** - Equalizer


Included with your UH5030 Transceiver

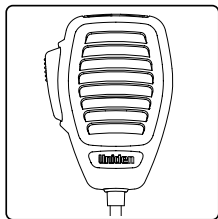


Microphone
(MK-770)

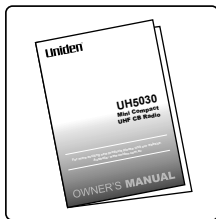


Owner's Manual

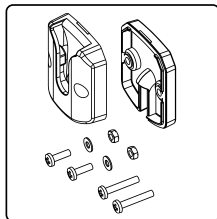

Microphone Hanger
with screws, washers

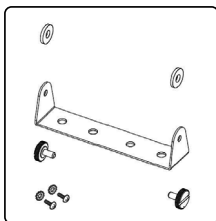

Mounting Bracket with
mounting screws

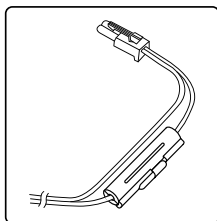


DC Power Cord
with fuse

Optional Accessories:

- UHF Antenna
- External Speaker

Visit the UH5030 page on the website for more information on the availability of optional accessories;
www.uniden.com.au for Australia

Connecting the Microphone

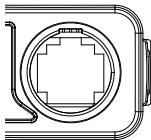

MIC Jack

Push the MIC plug at the end of the microphone into the MIC jack until the connection locks into place. Gently tug the MIC cord to test that the connection is locked. Use the rubber cover which is on the MIC cord to seal the MIC jack entry from dust.

Disconnecting the MIC from the MIC Jack


Pull back the rubber cover and move it down along the cord. Using the flat blade of a screwdriver or similar object carefully push the lock tab of the MIC plug towards the MIC cord and at the same time tug on the MIC cord to draw back the MIC plug.

Mounting the MIC Hanger

The Microphone Hanger comes in two parts. How and where you mount the MIC hanger will determine which parts to use.

Conventional Mounting with Screws


Use the front part of the MIC Hanger only. Locate a suitable mounting position and mark and drill two 3mm holes. Fix the MIC Hanger into place with screws.

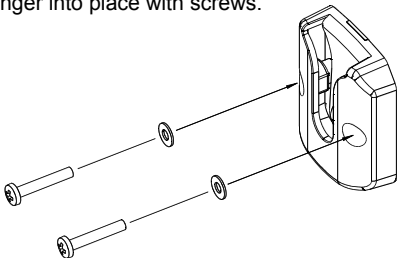

Conventional Mounting with Double Sided Tape (not supplied)

High quality Double-Sided tape can be found at good retail stores. Secure the front and back pieces of the MIC Hanger using the supplied binding screws.


Locate a suitable mounting position. Apply high quality Double-Sided tape onto the flat area of the MIC Hanger back piece and then press firmly to the mounting position.

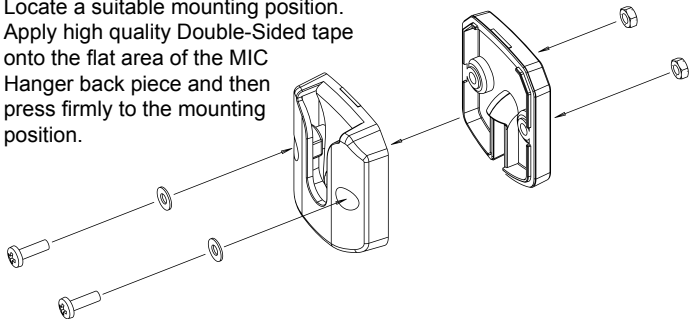

Operation

Turning on the Power

Press and hold the rotary knob.

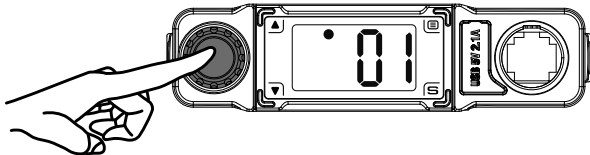

Low-Voltage/High-Voltage Alert

The UH5030 can operate on 13.8 volt DC or 27.6 volt DC power supply.

If the power supply voltage exceeds 30VDC, an alert tone sounds and **HI** flashes for 5 seconds. The power source must not exceed 32VDC otherwise permanent damage may occur to your radio, which may not be covered by the manufacturer's warranty.




NOTE

If the input voltage falls below 10VDC, **LO** flashes for 5 seconds. The power turns off automatically if voltage falls below 9.0VDC.

Switch your UH5030 OFF and disconnect it from the power source, before locating the cause of the power supply problem.

Setting the Volume


Turn the rotary knob to select desired volume.

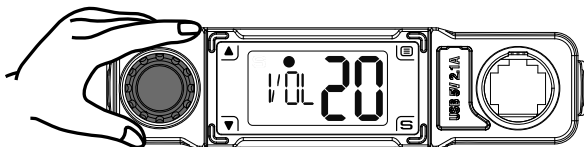

Operation

Selecting a Channel

Press ▲ / ▼ to select the desired channel.

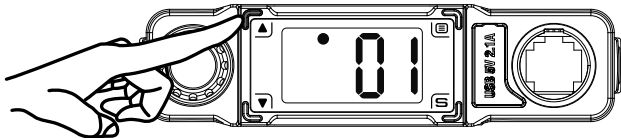

Transmitting

The UHF CB Radio uses UHF-CB Channels.




For your reference a list of the available channels, corresponding frequencies and guidelines for their use and selection is printed on p.27-29. For Australia, Channels 05 and 35 are reserved for Emergency Calls.

Select the desired channel. Press the microphone's PTT button and speak normally into the microphone. Hold it approx. 7cm from your mouth. Release the **[PTT]** button to end the transmission and listen for a reply.

Operation

Setting the Squelch Level

Press the rotary knob momentarily, **SQL** display on the screen and the current squelch level will flash.

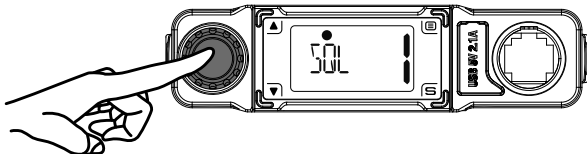

Turn the rotary knob or press ▲ / ▼ to change the setting between OFF, 1 - 9 and press the rotary knob to confirm selection.



A level of SQL 1 will allow the Squelch to open on very weak signals, whereas a level of SQL 9 requires strong signals to overcome the Squelch. The default level is SQL 1.




You must select a channel which is not in use before setting the SQUELCH control. (see p.11 for “Selecting a Channel”).

The squelch is used to eliminate any background noise when there are no signals present. When the squelch function is active the receiver remains quiet while there are no signals present but any incoming signals will override the squelch and be heard.

Monitor



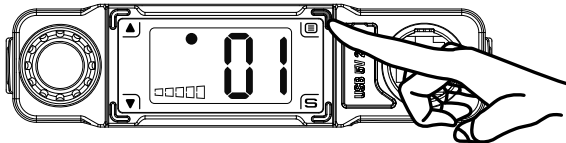





Press and hold  to open the squelch and receive all weak signals. Press and hold  again to cancel.



Operation









Programming the Instant Priority Channel-1

To program the instant channel 1.

1. Press .
2. Turn the rotary knob or press  /  till **IN1** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to select the desired channel.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.

Programming the Instant Priority Channel-2

To program the instant channel 2.

1. Press .
2. Turn the rotary knob or press  /  till **IN2** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to select the desired channel.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.

Recalling the Instant Channel

Momentarily press **[INST]** on the microphone at any time to return to the Instant Channel.

Call Function

Press **[CALL]** on the microphone. A three second ringing tone will be transmitted. You may select from 5 types of tones (see p.21 for “Selecting the Call tone”).



NOTE


Current regulations require calling tones to be restricted to one transmission per minute. If a second transmission is attempted within one minute then an error tone will sound.

Operation


Using Repeater Channels

UHF CB Repeaters are used to retransmit or relay your signal. Repeaters will extend the range of your radio and overcome the shielding effect caused by solid obstructions. In normal Simplex operation, your radio transmits on one particular frequency and receives on that same frequency.

If there is a barrier that partially blocks your transmitted signal, the probability of another radio receiving the signal is very slim. Hills, tall buildings, metallic structures,...etc tend to act as a screen between radios.

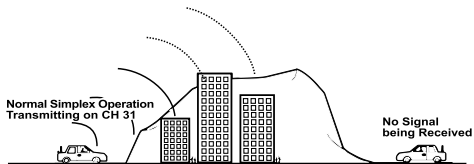

Standard Operation without the aid of a Repeater station.

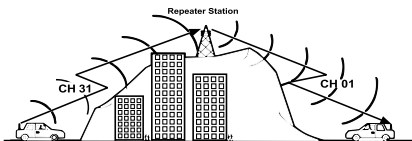

Operation with the aid of a Repeater Repeater Station (Duplex).

The signal coming from your radio is received by the Repeater Station and the re-transmitted at the same time on another channel. This operation is called “Duplexing”.

For example,

CH01 on Duplex Mode will Receive on CH01 but Transmit on CH31







CH02 on Duplex Mode will Receive on CH02 but Transmit on CH32 etc...


If you transmit on CH01 Duplex mode, you are actually transmitting on CH31 the repeater station down-converts your signal and retransmits on CH01.



Operation

Operating the UHF CB Radio in Duplex Mode

For this example we are adopting CH01 as the channel being used in your area for repeater use.

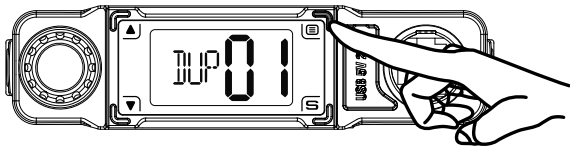1. Press .
2. Turn the rotary knob or press  /  till **DUP** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the setting between simplex and duplex (“ r ” for repeater channels 01 - 08 or “ n ” for repeater channels 41 - 48).



5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu. Only channels 01 - 08 and 41 - 48 are available for Duplex.



Check with your local Retailer for information on available repeaters.


Operation

Scanning

The scan feature allows you to search for active channels automatically.

The UH5030 has two types of scanning; Open Scanning (OS) and Group Scanning (GS), to give you flexibility and allow you to use the radio more effectively.

1. Press **S** and Scanning starts. The **S** icon appears. The scan direction can be changed at any time by pressing ▲ / ▼.

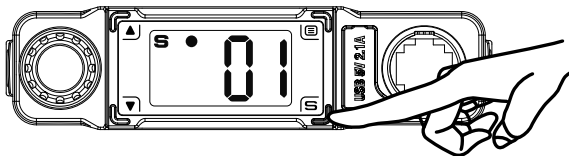

2. To deactivate SCAN, press **S**.



Open Scan (OS) Mode

Allows continuous scanning of all selected channels. If an active channel is found, scanning will stop on that channel. If the received signal ceases, the unit will wait 2 seconds for the signal to return, otherwise scanning resumes. After transmission in scan mode, the unit will wait 20 seconds for the signal to return, otherwise scanning resumes. To skip the active channel, press ▲ / ▼.

Group Scan (GS) Mode & Priority Watch


Includes the accessory feature, Priority Watch, which allows you to monitor the Instant Priority Channel-1 while scanning.

To use GS Mode Scanning;

1. Press .
2. Turn the rotary knob or press ▲ / ▼ till **OS** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press ▲ / ▼ to select Group Scan (GS).

Operation

5. Press **S** or rotary knob to save the setting.
6. Press **S** or rotary knob again to exit the menu.

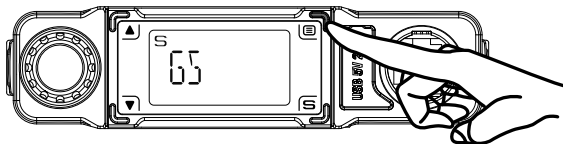

GS Scanning checks the Instant Priority Channel-1 for activity every 1.5 seconds.

If the Priority Channel becomes active the radio will stay on that channel for as long as the signal is present. If the received signal ceases, Priority Scanning continues after 2 seconds. If scanning stops on a channel which is not a Priority Channel, the radio will continue monitoring the Priority Channel for activity while listening to the active one.


To deactivate SCAN, press the **S** button.

Add/Remove Channels from SCAN Memory

Select which Scanning Mode you wish to use; OS or GS.

Select the channel you want to store.

Press and hold **S** to store. The **●** icon appears and a short tone is heard. To remove the channel from SCAN memory, press and hold **S** once more. The **●** icon disappears.

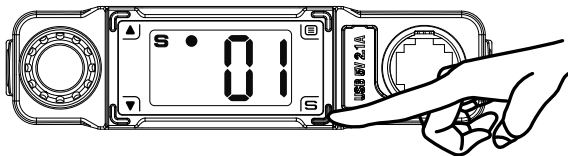

Operation

CTCSS (Continuous Tone Coded Squelch System) & DCS (Digital Coded Squelch)

Press ▲ / ▼ to the desired channel to use CTCSS or DCS.

Use the CTCSS or DCS privacy codes to talk to UHF-CB users, who are using the same code, without hearing other users on the same channel.


DCS is a digital extension of CTCSS. It provides 104 extra, digitally coded, squelch codes that follow after the 38 CTCSS codes. CTCSS 1-38, followed by DCS 1-104.

When a CTCSS or DCS tone is set for a UHF-CB channel, the CTCSS or DCS tone is displayed in the DCS/CTCSS code area. For channels with the setting of CTCSS OFF, there will be no display in the DCS/CTCSS code area.



Channels 5 and 35 are used for emergency channels. CTCSS and DCS will not operate on these channels.

1. Press ▲ / ▼ to the desired channel to use CTCSS or DCS.
2. Press
3. Turn the rotary knob or press ▲ / ▼ till **CTC** or **DCS** display on the screen.
4. Press the rotary knob or
5. Turn the rotary knob or press ▲ / ▼ to select the desired CTCSS code 01 - 38 or DCS code 01 - 104 (code 100 - 104 is represented by o0 - o4). To turn off CTCSS/DCS select the **oF** code.
6. Press
7. Press

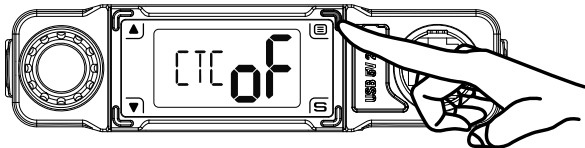







Operation


Voice Enhancer (EQL) Setting



Choose from 4 different receive audio level settings to provide a natural Voice Enhancer for super clarity and performance.

Press and hold **[INST]** on the microphone to switch the setting between **OFF, L1, L2** or **L3**;

or

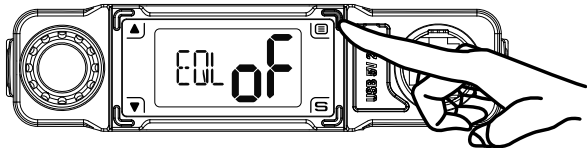1. Press .
2. Turn the rotary knob or press  /  till **EQL** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the setting between **OFF, L1, L2** or **L3**.




5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.

OFF : Normal - Standard of FLAT.

L1 : Bass - Enhancing the low frequency, the sound quality becomes mild and easy to listening, not causing fatigue.

L2 : Midrange - Enhancing midrange frequency, the sound quality becomes clear.



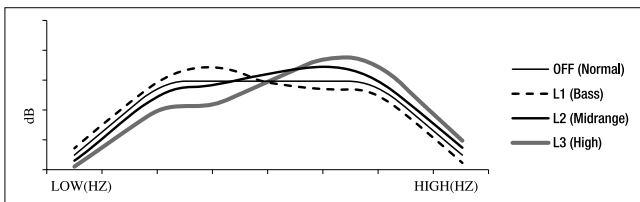





L3 : High - Enhancing the high frequency, the sound quality becomes sharp.




Operation

Scramble





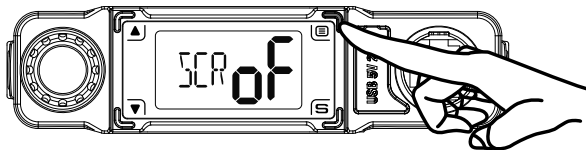



Scramble enables private communications by scrambling the voice signal. This prevents users without descrambler equipment or a compatible unit understanding the conversation.


1. Press .
2. Turn the rotary knob or press  /  till **SCR** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the setting between **OFF, 1 and 2**.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.



USB Power

To set the USB power supply when the unit is off.



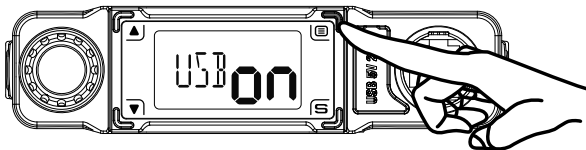





1. Press .
2. Turn the rotary knob or press  /  till **USB** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the setting between **ON or OFF**.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.




Operation

Busy Channel Lockout





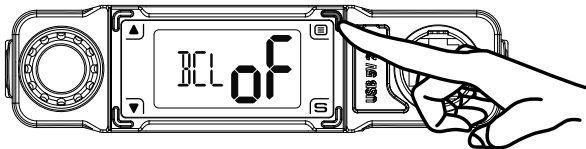



If the channel is already in use, you can prevent the UHF CB Radio from transmitting. This is particularly important when using CTCSS/DCS.


1. Press .
2. Turn the rotary knob or press  /  till **BCL** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the setting between **ON** or **OFF**.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.



Call Tone





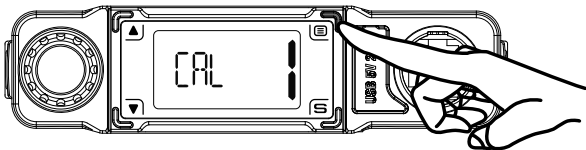



The radio is equipped with 5 selectable call tones that will be transmitted when **[CALL]** is pressed on the microphone.


1. Press .
2. Turn the rotary knob or press  /  till **CAL** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the setting between **1**, **2**, **3**, **4** and **5**.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.



Operation





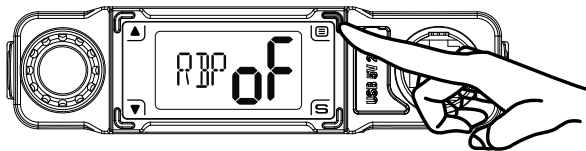



Roger Beep


1. Press .
2. Turn the rotary knob or press  /  till **RBP** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the setting between **ON** or **OFF**.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.



Key Beep

To set Key Beep volume.



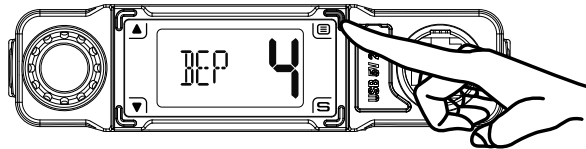





1. Press .
2. Turn the rotary knob or press  /  till **BEP** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the setting between **OFF, 1, 2, 3... 7**.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.




Operation

MIC Gain Control





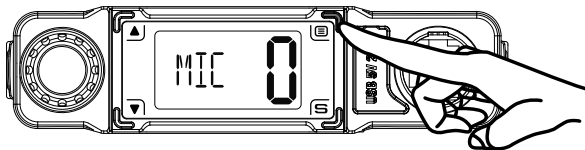



To control the gain (sensitivity) of microphone.


1. Press .
2. Turn the rotary knob or press  /  till **MIC** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the the MIC Gain setting between (Low) **-6, -5, -4.... 0, 1, 2, 3** (High)
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.



Backlight Colours

To set the LCD backlight brightness.



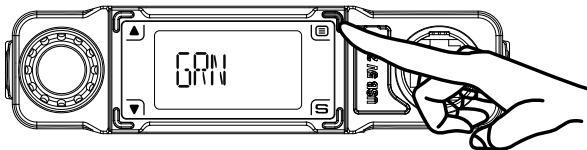





1. Press .
2. Turn the rotary knob or press  /  till the current Backlight colour **[GREEN, CYAN, YELLOW, CLEAR, BLUE, RED or ORANGE]** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to select the desired colour setting.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.




Operation

Backlight Brightness





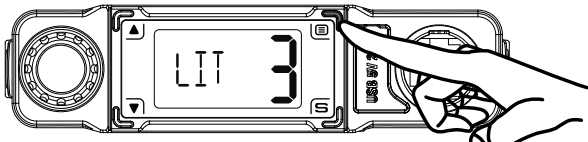



To set the LCD backlight brightness.


1. Press .
2. Turn the rotary knob or press  /  till **LIT** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the setting between **OFF, 1, 2** or **3**.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.



LCD Flip

To change the display orientation.

1. Press .
2. Turn the rotary knob or press  /  till **FLP** display on the screen.
3. Press the rotary knob or  to confirm menu selection.
4. Turn the rotary knob or press  /  to change the flip orientation.
5. Press  or rotary knob to save the setting.
6. Press  or rotary knob again to exit the menu.

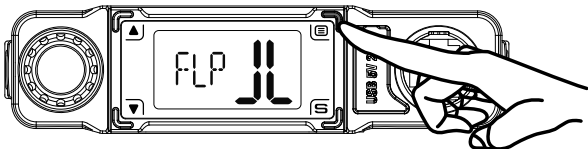

CTCSS codes table

Code No.	Frequency (Hz)	Code No.	Frequency (Hz)
"oF"	OFF	20	131.8
1	67.0	21	136.5
2	71.9	22	141.3
3	74.4	23	146.2
4	77.0	24	151.4
5	79.7	25	156.7
6	82.5	26	162.2
7	85.4	27	167.9
8	88.5	28	173.8
9	91.5	29	179.9
10	94.8	30	186.2
11	97.4	31	192.8
12	100.0	32	203.5
13	103.5	33	210.7
14	107.2	34	218.1
15	110.9	35	225.7
16	114.8	36	223.6
17	118.8	37	241.8
18	123.0	38	250.3
19	127.3		

DCS codes table

Code No.	DCS Code (Octal)	Code No.	DCS Code (Octal)	Code No.	DCS Code (Octal)
1	023	36	223	71	445
2	025	37	225	72	446
3	026	38	226	73	452
4	031	39	243	74	454
5	032	40	244	75	455
6	036	41	245	76	462
7	043	42	246	77	464
8	047	43	251	78	465
9	051	44	252	79	466
10	053	45	255	80	503
11	054	46	261	81	506
12	065	47	263	82	516
13	071	48	265	83	523
14	072	49	266	84	526
15	073	50	271	85	532
16	074	51	274	86	546
17	114	52	306	87	565
18	115	53	311	88	606
19	116	54	315	89	612
20	122	55	325	90	624
21	125	56	331	91	627
22	131	57	332	92	631
23	132	58	343	93	632
24	134	59	346	94	654
25	143	60	351	95	662
26	145	61	356	96	664
27	152	62	364	97	703
28	155	63	365	98	712
29	156	64	371	99	723
30	162	65	411	100 (do0)	731
31	165	66	412	101 (do1)	732
32	172	67	413	102 (do2)	734
33	174	68	423	103 (do3)	743
34	205	69	431	104 (do4)	754
35	212	70	432		

UHF CB Channel Guidelines

Always listen on a channel (or observe the receive signal level meter) to ensure it is not already being used before transmitting.

Channels 5 and 35 are used for emergency channels. CTCSS and DCS will not operate on these channels.

Please follow these guidelines for channel use in Australia:

- Channels 05 and 35 are Emergency Channels.
- Channel 11 is a Calling Channel.
- Channels 22 and 23 are for telemetry and telecommand applications, channels 61, 62 and 63 are for future use and TX is inhibited on these channels.



NOTE

General communication is accepted on all other channels with these guidelines:

- Channel 40 - road channel (Australia).
- Channels 01-08 (and 31-38), and Channels 41-48 (and 71-78) are repeater channels.

Important information - 80 Channel UHF CB channel expansion

To provide all users additional channel capacity within the UHF CB Band. The ACMA will change the majority of the current wideband 40 channel use to narrowband channel use. This allows for additional channels to be added, up to 80 Channels.

This simply means that the new narrowband radio you have purchased will have more channels than older radios. Please refer to the guidelines above and the channel chart for further channel information.

A list of currently authorised channels can also be obtained from the ACMA website in Australia and the MED website in New Zealand.



NOTE

Interference / Poor Audio

When a new narrowband radio receives a signal from an older wideband radio the speech may sound loud - however the UH5030's built-in AVS (Automatic Volume Stabilizer) circuitry will detect and manage incoming audio to comparable levels.

Narrowband radios operating on CH41 - CH80 may encounter interference from a nearby wideband radios transmitting on high power on an adjacent channel (frequency).

When an older wideband radio receives a signal from a new narrowband radio the speech may sound quiet - the wideband radio user simply adjusts their radio volume for best performance.

The above situations are not a fault of the radio but a symptom of mixed wideband and narrowband radios in current use. It is expected that as older wideband radios are phased out this issue will be eliminated.

UHF CB Channels & Frequencies

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CH No.	Simplex Mode Transmit / Receive Frequency (MHz)
1	476.425	477.175 (CH31)	21	476.925
2	476.450	477.200 (CH32)	22	476.950 (RX only)
3	476.475	477.225 (CH33)	23	476.975 (RX only)
4	476.500	477.250 (CH34)	24	477.000
5	476.525	477.275 (CH35)	25	477.025
6	476.550	477.300 (CH36)	26	477.050
7	476.575	477.325 (CH37)	27	477.075
8	476.600	477.350 (CH38)	28	477.100
9	476.625		29	477.125
10	476.650		30	477.150
11	476.675		31	477.175
12	476.700		32	477.200
13	476.725		33	477.225
14	476.750		34	477.250
15	476.775		35	477.275
16	476.800		36	477.300
17	476.825		37	477.325
18	476.850		38	477.350
19	476.875		39	477.375
20	476.900		40	477.400

UHF CB Channels & Frequencies

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CH No.	Simplex Mode Transmit / Receive Frequency (MHz)
41	476.4375	477.1875 (CH 71)	61	future use 476.9375 (RX only)
42	476.4625	477.2125 (CH 72)	62	future use 476.9625 (RX only)
43	476.4875	477.2375 (CH 73)	63	future use 476.9875 (RX only)
44	476.5125	477.2625 (CH 74)	64	477.0125
45	476.5375	477.2875 (CH 75)	65	477.0375
46	476.5625	477.3125 (CH 76)	66	477.0625
47	476.5875	477.3375 (CH 77)	67	477.0875
48	476.6125	477.3625 (CH 78)	68	477.1125
49	476.6375		69	477.1375
50	476.6625		70	477.1625
51	476.6875		71	477.1875
52	476.7125		72	477.2125
53	476.7375		73	477.2375
54	476.7625		74	477.2625
55	476.7875		75	477.2875
56	476.8125		76	477.3125
57	476.8375		77	477.3375
58	476.8625		78	477.3625
59	476.8875		79	477.3875
60	476.9125		80	477.4125

Warranty

UNIDEN UH5030 UHF CB Transceiver

IMPORTANT: Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor: The warrantor is Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”).

Terms of Warranty: Uniden Aust warrants to the original retail purchaser only that the UH5030 (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty period: This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand.

Product	5 Years
Battery Pack & Accessories	1 Year

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered: This warranty covers the Product and included accessories.

Warranty

User-generated Data: This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy: If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for obtaining warranty service: Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden. Please refer to the Uniden website for address details. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Phone: 1300 366 895

Email: custservice@uniden.com.au

THANK YOU FOR BUYING A UNIDEN PRODUCT.

Uniden[®]

© 2019 Uniden Australia Pty Limited. Printed in Vietnam.
: U01UT991ZZZ(0)